

The net has been designed with red tabs to identify the top corners and blue tabs to identify the bottom front corners. Follow the numbered sequence to attach the net.

Net Assembly Instructions

1. Using 2 self-stick closure straps, 1 for each corner on the top bar, tie the top right and top left corners, identified by the two RED tabs.
2. Using 2 self-stick closure straps, 1 for each corner on the lower front bar, tie the lower right and lower left corners identified by the two BLUE tabs.
3. Stretch the net and using 2 self-stick closure straps tie the back bottom corners.
4. Fill in the top front section with 5 self-stick straps.
5. Fill in the two side sections with 5 self-stick straps.
6. Fill in the bottom back section with 6 self-stick straps.

NOTE: Adjust the self-stick straps by moving the straps left or right as necessary to prevent large gaps.


NOTE: Following goal assembly, 6 ground stakes will help secure the goal. Two are recommended placed over each side/base tubes, right side and left side near the front. Two are recommended placed over the back/base tubes.

Franklin®

No. 5650

FOLDING SOCCER GOAL

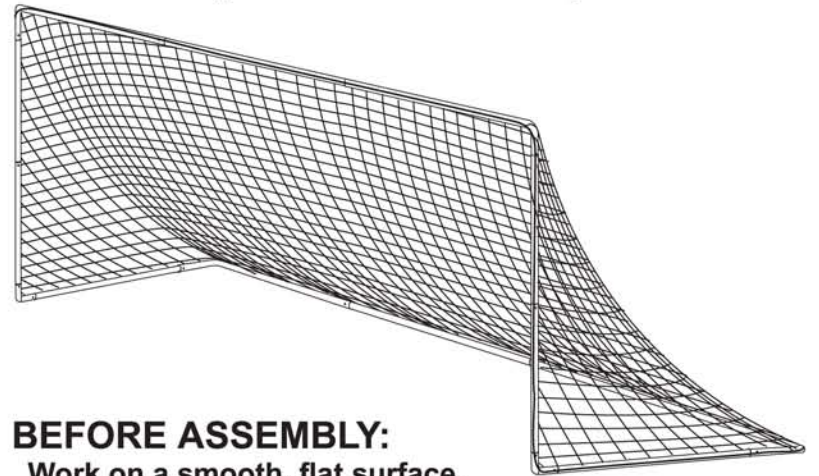SIZE: 5ft High x 10ft Wide x 4ft Deep
(1.52m x 3.05m x 1.22m)



BEFORE ASSEMBLY:

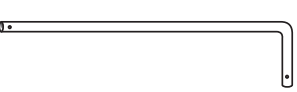
 
 
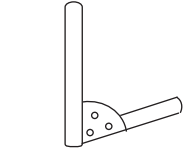
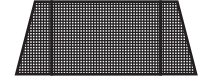



 

Work on a smooth, flat surface.
Lay out all components so they are in easy reach.
Read assembly instructions completely to familiarize yourself with the components before you begin assembly.

This goal is designed to provide many hours of enjoyment if properly assembled and used only for the purpose intended.




Adult supervision is recommended when the goal is used by children.

FRAME COMPONENTS

①		41.75in L Shaped Bent Tube (106.04cm)	4pcs
②		41.75in Straight Double (106.04cm) Flanged Tube	2pcs
③		27.25in Straight Double (69.2cm) Flanged Tube	2pcs
④		41.75in Folding Corner Piece (106.04cm)	2pcs
⑤		Net	1pc
⑥		Self-Stick Straps	40pcs
⑦		Ground Stakes	6pcs
⑧		Pin	2pcs
⑨		2in Screw (5.08cm)	2pcs
⑩		Bolt	2pcs

FRAME ASSEMBLY

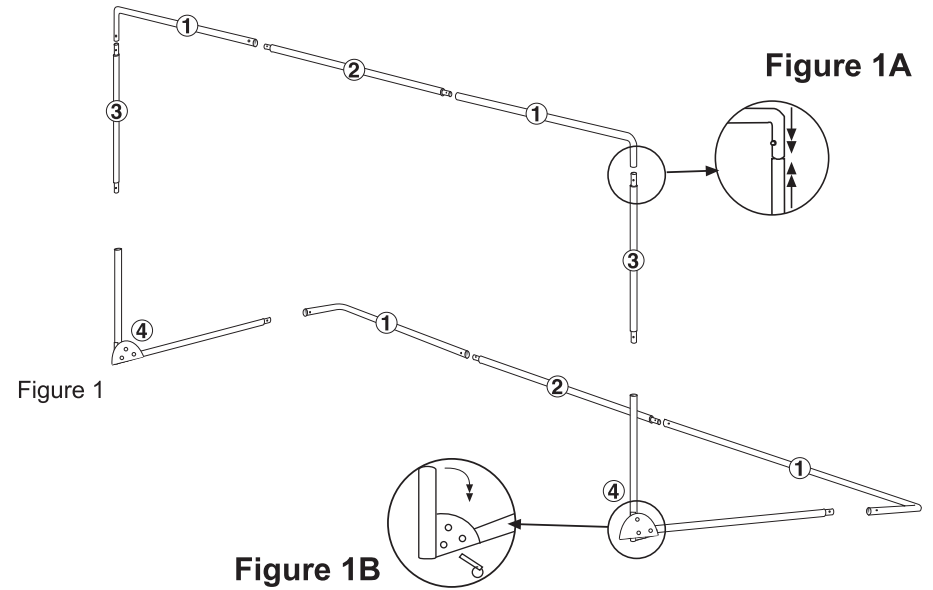Assemble all lengths of tubing as shown in Figure 1. Be sure that each piece is inserted completely. The end of each tube inserts tightly and is secured when the press button of the tapered end pops through the adjoining perforated tube. (Refer to Figure 1A)



Assembly Instructions

1. Assemble top front cross bar and back base bar by inserting pipe marked ② (Straight Tube) into the 2 pipes marked ① (L Tube).
2. To create the lower back bar, insert the longer tapered side of tube ④ into the 2 short bent ends of the tube marked ①. Insert press pin ⑧ as shown in Figure 1B to secure the corner piece ④.
3. Insert tube ③ onto top of tube ④ on both ends of the structure.
4. Attach the top front cross bar (assembled in step 1) to upward pointing tubes marked ③.
5. To fold goal (refer to Figure 1B) remove the press pin on both sides before folding top back.
6. To secure folded goal, use a self-stick strap ⑥ on each side bar.